

Procedure for Generating a Zone PID Table

Depending on your needs, you can create your own Zone PID table with ten temperature zones.

NOTE: The controller must be in zone mode. This is accomplished by pressing **Control Setup** and then **Next Setting** until you reach “Control Mode”. Use **▲** or **▼** to select the “zone” option. Press **Save Screen** until you return to the temperature display.

PROCEDURE TO ENTER YOUR OWN TABLE OF PID VALUES:

1) Press **Zone Settings**

You should see the following screen:

LOOP: 1	ZONE SETTINGS					
	TOP	P	I	D	MOut %	Range
1	100	0.0	0.0	0	0.00	OFF
2	100	0.0	0.0	0	0.00	OFF
3	100	0.0	0.0	0	0.00	OFF
4	100	0.0	0.0	0	0.00	OFF
5	100	0.0	0.0	0	0.00	OFF

2) Press **Enter** or **Next Setting** to advance through the entries

3) Use the keypad to type in the desired values and push **Enter** to move along

4) When you are done, press **Save Screen**

